

Driver ID Installation Attachment

Driver ID Location

- Find a location on the dashboard where the wire from the tracker will reach the desired Driver ID reader location.
- ClearPathGPS recommends placing the reader away from the ignition key location – to prevent drivers inadvertently shutting the ignition off while trying to scan the Driver ID.

Physical Attachment

Driver ID Reader:

- There are two cables from the Driver ID reader that need to be connected to the tracker’s wiring harness:
 - Square four pin connector
 - Rectangular two pin connector
- Find the mating connectors on the tracker’s harness, and plug them in. They are keyed – and will only connect “the right way.” Be sure the small locking tab engages.
- Green wire: This is unused, and may be taped up.

Driver ID Buzzer:


- Connect the buzzer’s three pin rectangular cable to the tracker’s wiring harness. The cable is also keyed and has a locking connector.

Testing

After installing the GPS tracker, and connecting the cables turn the vehicle’s ignition to “On”.

- The buzzer will beep continuously to signal that no Driver ID has been scanned.
- Scan a Driver ID Fob. The reader will flash red – to indicate a successful scan.
- A Driver ID scan is required on ignition if the ignition has been off for more than 10 minutes.

Driver ID Reader Connectors

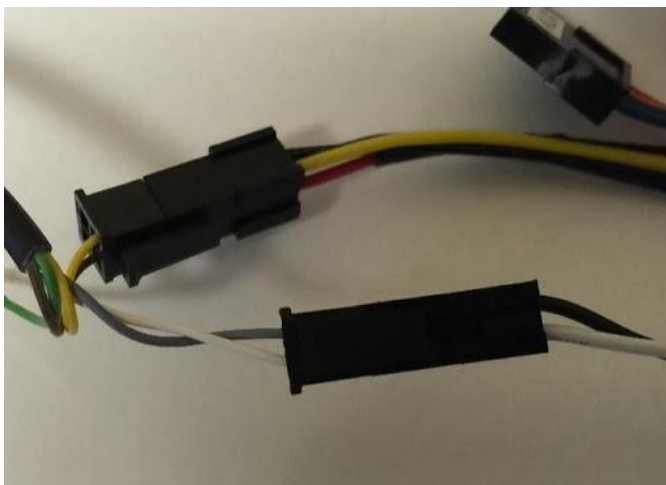

Buzzer Connector

